

9/15/2005

MC Enterprises

INSTALLATION INSTRUCTIONS

Description: **Full Size Engine Guard**

Part Number: **1000-04**

Full Engine Guards are designed to fit with stock exhaust systems and may not fit with aftermarket systems.

Applications: **Honda VT750 Shadow Aero 2004-2006**

CONTENTS	Ref	Description	Qty	Ref	Description	Qty	Ref	TOOLS REQUIRED
	1.	Engine Guard	1	5.	6mm x 35mm Hex Bolt	1	1.	3/8" Drive Metric Socket Set
	2.	1" X 7/16" X 1/4" Spacer	2	6.	3/8" Flat Washers	4	2.	Metric Combination Wrench Set
	3.	10mm X 30mm Hex Bolts	3	7.	1/4" USS Flat Washers	2		
	4.	10mm X 100mm Hex Bolt	1					

MC Enterprises accessories are designed to fit the stock motorcycle as it was originally manufactured and, with a few exceptions, to be compatible with other MC accessories. The compatibility with other brands of accessories cannot be assured.

Preparation Prior to Installation

Be sure you read and understand the instructions completely before starting installation to avoid possible injury to yourself or damage to the motorcycle and/or accessory. **Notice to the Dealer:** The instructions contain important information for future reference and should be given to the customer.

CAUTION

AVOID PERSONAL INJURY INSTALL ON A COLD ENGINE.

NOTE: WE RECOMMEND TWO PEOPLE INSTALL THE GUARD. ONE TO GUIDE THE GUARD INTO POSITION AND THE OTHER TO ATTACH THE MOUNTING HARDWARE.

INSTALLATION INSTRUCTIONS

- HOLD ENGINE GUARD UP TO THE BIKE TO FAMILIARIZE YOURSELF WITH THE MOUNTING LOCATION OF ALL COMPONENTS AND THEIR ATTACHMENT POINTS.
- LOOSEN THE LOWER FRONT BOLTS ON BOTH FOOTPEG MOUNTING BRACKETS.
- REMOVE THE LOWER REAR BOLTS ON BOTH FOOTPEG MOUNTING BRACKETS.
- INSERT ONE OF THE NEW 1" X 7/16" X 1/4" SPACERS BETWEEN THE FRAME AND THE REAR FOOTPEG MOUNTING BRACKET ON EACH SIDE.
- SECURE WITH ONE OF THE NEW 10mm X 30mm HEX BOLTS WITH A NEW 3/8" FLAT WASHER THROUGH THE ORIGINAL FOOTPEG MOUNT, THEN THE 1" X 7/16" X 1/4" SPACER AND THREAD INTO THE FRAME.
- REMOVE THE TOP BOLT ON THE PLASTIC RADIATOR COVER.
- CAREFULLY INSERT THE ENGINE GUARD BETWEEN THE FRONT FENDER AND THE FRAME WITH THE OPEN PORTION OF THE GUARD AT THE BOTTOM.
- INSERT THE NEW 6mm X 35mm HEX BOLT WITH A NEW 1/4" USS FLAT WASHER THROUGH THE ENGINE GUARDS' TOP MOUNT, THEN THE OTHER 1/4" USS FLAT WASHER, THROUGH THE HOLE IN THE PLASTIC RADIATOR COVER AND THREAD INTO THE FRAME. TIGHTEN LOOSELY..

CAUTION

DO NOT OVER TIGHTEN OR YOU WILL BREAK THE PLASTIC COVER.

- REMOVE THE FRONT BOLTS ON BOTH FOOTPEG MOUNTING BRACKETS.
- INSERT THE ENGINE GUARDS LOWER MOUNTING BRACKETS BETWEEN THE STOCK FOOTPEG MOUNTS AND THE FRAME AND ALIGN THE MOUNTING BRACKETS.
- ON THE LEFT (SHIFTER SIDE) INSERT THE NEW 10mm X 30mm HEX HEAD BOLT WITH A NEW 3/8" FLAT WASHER THROUGH THE FOOTPEG MOUNT, THEN THE ENGINE GUARDS' MOUNTING BRACKET AND THREAD INTO THE FRAME. TIGHTEN LOOSELY.
- ON THE RIGHT (BRAKE SIDE) INSTALL THE NEW 10mm X 100mm HEX BOLT WITH A NEW 3/8" FLAT WASHER THROUGH THE FOOTPEG MOUNT, THEN THE ENGINE GUARDS' MOUNTING BRACKET AND INTO THE FRAME.
- SECURE WITH THE ORIGINAL NUT. TIGHTEN LOOSELY.
- CHECK ALIGNMENT AND TIGHTEN ALL FASTENERS SECURELY.

WARNING: BEFORE RIDING! CHECK AND ADJUST THE BRAKE PEDAL TO INSURE IT DOESN'T CONTACT THE ENGINE GUARD UNDER HEAVY BRAKING.

- WE RECOMMEND THE USE OF A THREAD SEALANT SUCH AS VIBRA-TITE ON ALL FASTENERS.

INSTRUCTIONS CONTINUE ON REVERSE SIDE.


INSTALLATION INSTRUCTIONS CONTINUED

Description: **Full Size Engine Guard**

Part Number: **1000-04**

Application: **Honda VT750 Shadow Aero 2004-2006**

NOTE: RECHECK THE TIGHTNESS OF ALL FASTENERS AFTER 50 MILES (80 KILOMETERS) AND DURING EACH PERIODIC MAINTENANCE THEREAFTER. LOOSE FASTENERS CAN IMPAIR THE STABILITY OF THE MOTORCYCLE.

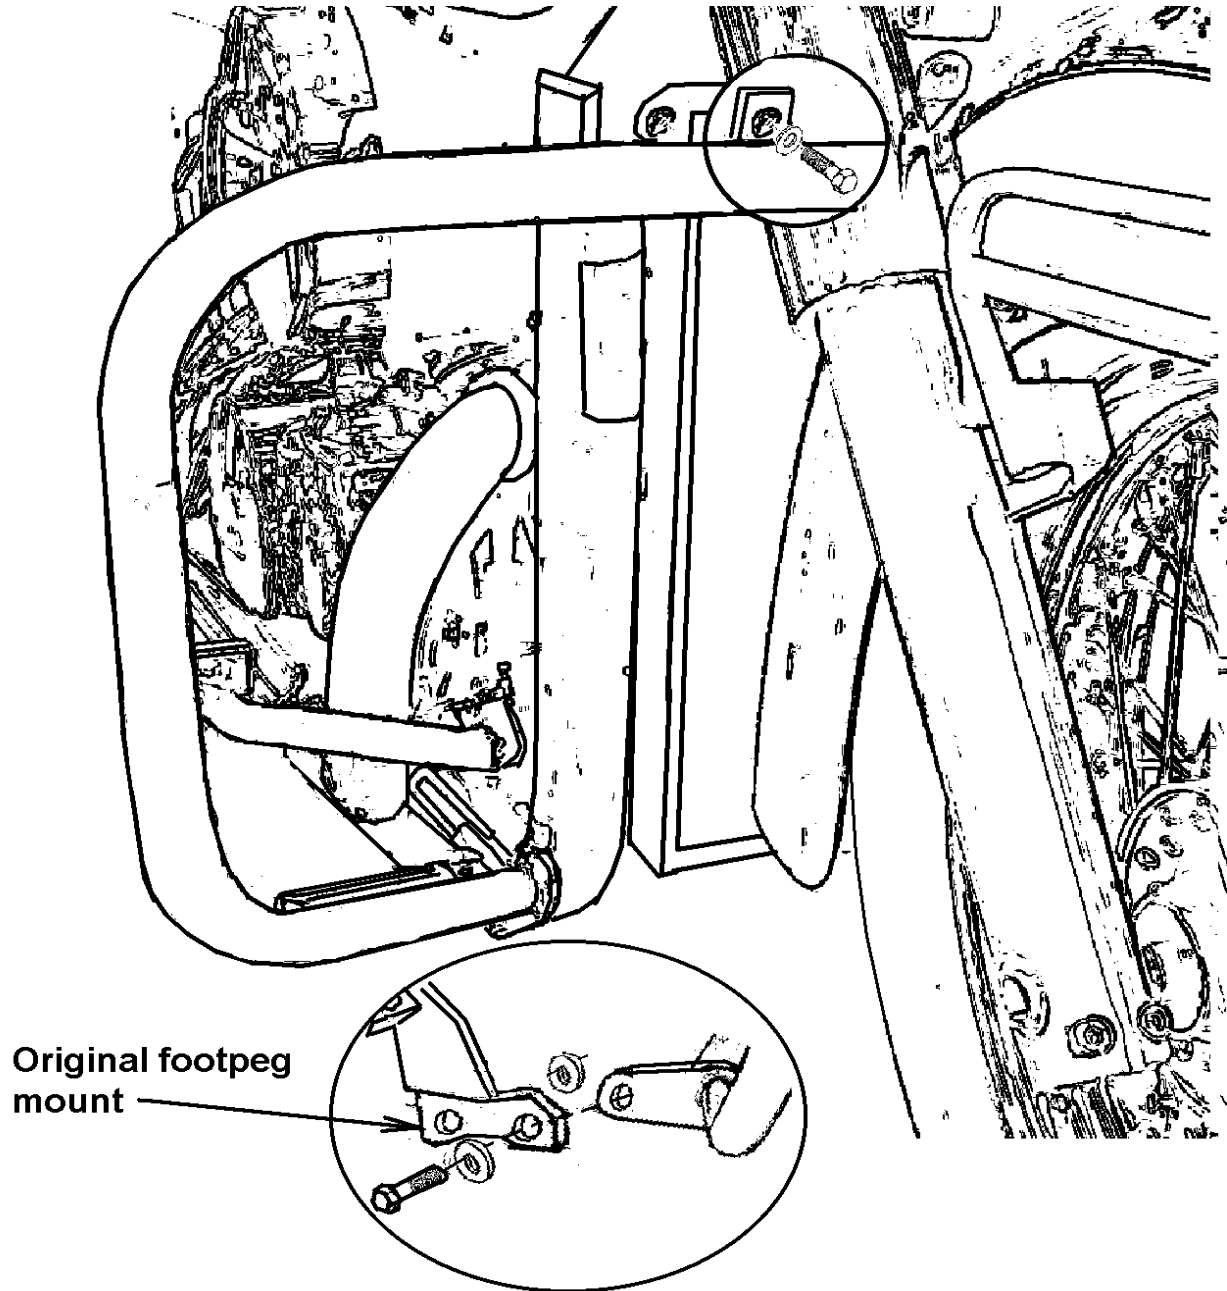

For additional MC Enterprises accessories visit us on the web at www.mcenterprises.com
MC Enterprises - 460 South Lombard St., Oxnard, CA 93030 Phone 866.886.2368